

Changing a security code on the keypad:

**Panel Type:** *First Alert 168, First Alert 130, Vista 10P, Vista 20P*

1. Type in Master code
2. Hit 8
3. Hit 02
4. New Code
5. New Code again.

\*\* When doing these steps do not hesitate or pause, doing so may result in repeating above steps.

**Panel Type:** *Gem 800, Gem P801*

Press Function key followed by 8, and enter the user 1 code followed by on/off. The armed, status and ! will flash, and the keypad will beep 4 times. You are now in the user program mode. Zones 1 through 8 will light to indicate any user codes presently programmed.

Adding/changing user codes:

1. Press User number to be programmed ( for example, press 2 to program the user 2 code). The keypad will beep 2 times and the corresponding zone will flash to indicate the user number you are about to program.
2. Press in the 4 digits of the new user code, the keypad will beep 4 times
3. If there are more user codes to be entered return to step 1 above, otherwise, go to exiting the user Program Mode below.

Exiting the user program mode: When you are finished programming codes, press reset to exit the user program mode