

DSC

From Tyco Security Products

PowerSeries Security System Quick Reference Guide



To arm entire system – both interior and perimeter

- Close all windows and doors (the green Ready light will turn ON)
- Press and hold **[Away]** for 2 seconds (the keypad will beep rapidly 5 times and the red Armed light will turn ON)
- Exit premises before the delay time expires

To disarm system when you return

- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit Master Code or User Code (the armed light will turn OFF)
- If you make an error, press **[#]** and enter the 4-digit code again

To arm perimeter of building and still move freely inside

- Press and hold **[Stay]** for 2 seconds

To arm system with door or window open

- Press **[*]** **[1]** while disarmed
- The Bypass light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the Bypass function press **[#]**

To silence alarm

- Enter your 4-digit Master Code or User Code

When trouble light comes on

- Press **[*]** **[2]**
- Some keypads will describe the Trouble (full-message keypads); others will only identify the Trouble number (fixed-message and LED keypads)
- If Trouble number 8 is lit, the time and date needs to be reset
- For all other Trouble conditions, contact your security provider

To set time and date

- Press **[*]** **[6]** and enter the 4-digit Master Code
- 1 long beep indicates an error, press **[#]** and enter the Master Code again
- After 4 short beeps, press **[1]** then 10 digits, 2 each for the hour, minute, month, day and year (HH:MM MM/DDYY)
- Use a 24-hour clock (e.g. 8:30 pm = 20:30)
- Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)

www.dsc.com | 1-888-888-7838

Lic. # 55078

AWS

Security
Audio/Video
Telephone
Network Wiring

Office (665) 523-4018
Emergency (665) 669-6706
Lighting Control

DSC

From Tyco Security Products

To add access codes

- Press **[*]** **[5]** and enter the 4-digit Master Code
- 1 long beep indicates an error, enter the Master Code again
- 3 short beeps indicates acknowledgement, enter a 2 digit user number to be programmed. User Codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User Codes 01-95 are available for the PC1864.

- Enter the 4 digits for the code
- Enter another 2 digit number to program another code or press **[#]** to exit

To remove access codes

- Press **[*]** **[5]** and enter the 4-digit Master Code
- 1 long beep indicates an error, enter the Master Code again
- 3 short beeps indicate acknowledgement, enter the 2 digit user number to be removed. User Codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User Codes 01-95 are available for the PC1864.
- Enter **[*]** to remove the code and press **[#]** to exit
- Once the code has been removed, press **[#]** to exit

To enable door chime feature

- Press and hold **[@]** (Door Chime) for 2 seconds
- 3 beeps = ON; 1 long beep = OFF

Changing keypad buzzer tone

- If using a PK5500 keypad, press **[*]** **[6]** and enter the 4-digit Master Code then proceed with the following:
 - Scroll to the phrase "Buzzer Control" and press **[*]**
 - If using an LED or fixed-message keypad, press **[*]** **[6]** and enter the 4-digit Master Code then proceed with the following:
 - Press and hold **[<]** (Left Arrow)
 - The tone will change
 - When the desired tone is identified, release **[<]** (Left Arrow)

To sound an alarm manually

- Press and hold **[4]** (Fire) or **[A]** (Emergency) or **[V]** (Panic) for 2 seconds

For more information

- Visit www.dsc.com to download the complete user manual

PN 3000134E001

Product specifications and availability subject to change without notice. Certain product names mentioned herein may be trade names and/or registered trademarks of other companies. © 2013 Tyco Security Products.