

## Procedure for Programming Aux. Relay for Alarm Activation

1. Enter programming, Installers Code (5140) + 8 + 0 + 0 + 0 screen displays "PROGRAM MODE \* FILL # VIEW -00"
  2. Press \*94, screen displays "ALT PROGRAM MODE \* FILL # VIEW 100"
  3. Press \*94, screen displays "ALT PROGRAM MODE \* FILL # VIEW 200"
  4. Press \*94, screen displays "ALT PROGRAM MODE \* FILL # VIEW 300"
  5. Press \*61, screen displays "AUX RLY FUNC SEL"
  6. Enter 1 to enable alarm, silenced by code + off or 4 to enable alarm silenced by code + #67, default = 1.
- NOTE: The auxiliary relay must be assigned to the active zones in zone programming bell/relays select if this action is desired.**
7. Press \*99, screen displays "ALT PROGRAM MODE \* FILL # VIEW 200"
  8. Press \*99, screen displays "ALT PROGRAM MODE \* FILL # VIEW 300"
  9. Press \*99, screen displays "PROGRAM MODE \* FILL # VIEW - 00"
  10. Press \*99 to exit program mode.