THIS TRAINING POWER-POINT,


"Z-WAVE DEVICES", WILL GUIDE
YOU THROUGH THE OPERATION OF
YOUR Z-WAVE DEVICES.

NOTE: IN THESE PRESENTATIONS WE ARE USING THE LAPTOP COMPUTER TO NAVIGATE THE PROGRAM, YOU CAN USE THE IPAD OR THE IPHONE ALSO. THE VIEW WILL BE DIFFERENT, BUT ALL INFORMATION IS AVAILABLE TO YOU.


## VIEW OF CUSTOMER PORTAL ON I-PHONE.





Viewing with the I-Phone gives you a different screen than the Laptop as presented in this document, but all the information is the same and you can work with all areas of your Helix Security and Automation System using the I-Phone.

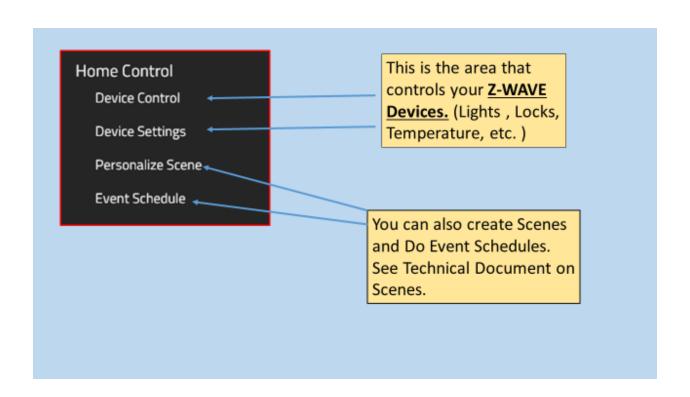





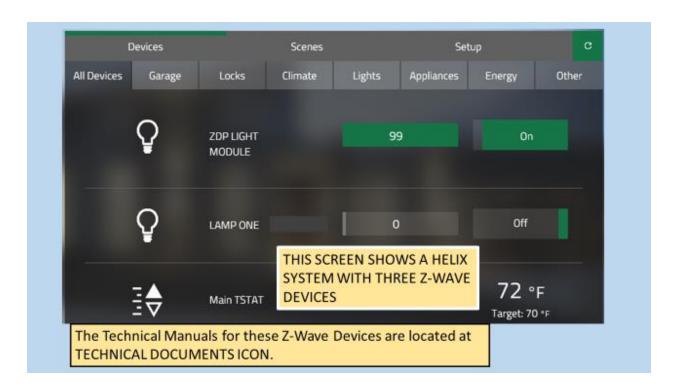

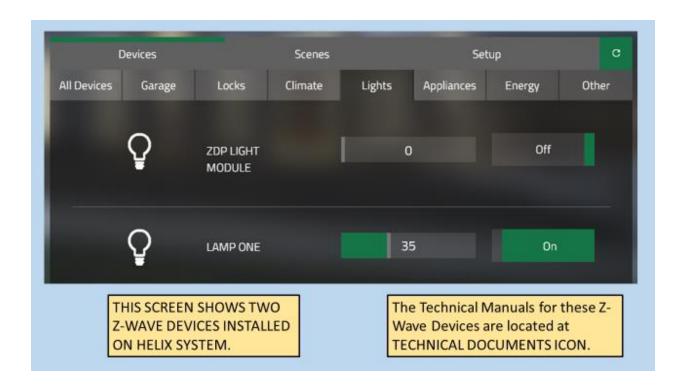

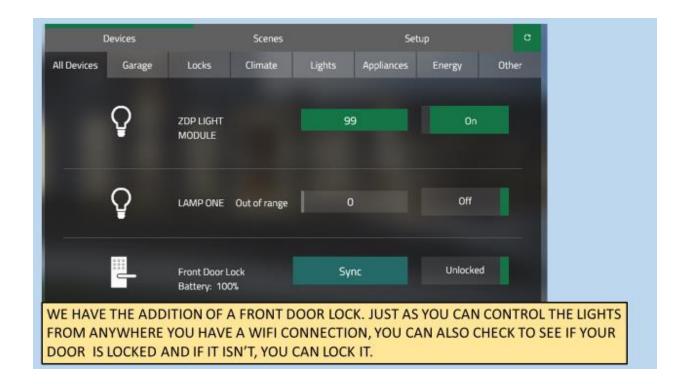

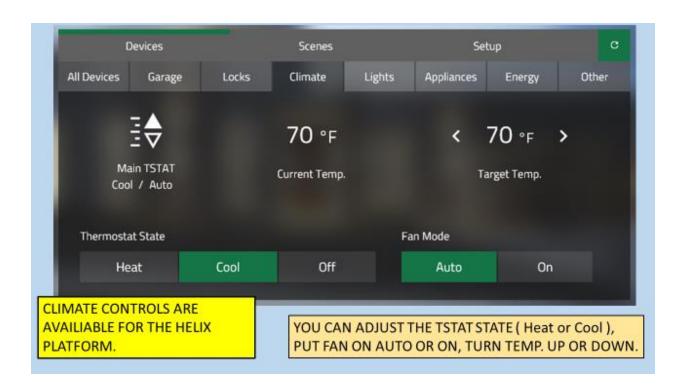

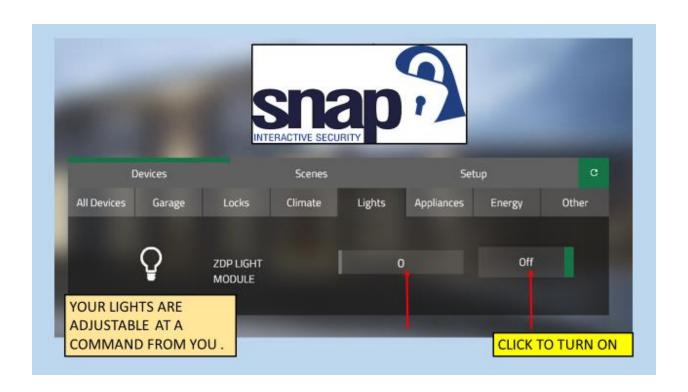





NOW THAT YOU ARE FAMILIAR WITH HOW THE Z-WAVE AREA OF YOUR SYSTEM FUNCTIONS, YOU CAN ACTIVATE YOUR LIGHTS, PLUG IN LAMP DIMMERS, APPLIANCE SWITCHES, SMART THERMOSTATS OR GARAGE DOOR OPENER CONTROLLERS.


START WITH YOUR Z-WAVE LIGHTS AS THEY ARE THE MOST COMMON IN THE SNAP INTERACTIVE SECURITY PACKAGES. WE WILL GO THROUGH THE PROCEDURE STEP BY STEP AND THEN IT WILL BE EASIER FOR YOU TO DO THE REMAINING Z-WAVE DEVICES.

BEFORE YOU INSERT THE Z-WAVE LIGHT INTO IT'S SOCKET, MAKE SURE THERE IS NO POWER ON THE SOCKET. INSERT THE Z-WAVE LIGHT INTO THE LAMP SOCKET AND APPLY POWER, IT SHOULD TURN ON. IT SHOULD ALSO BE ACTIVE ON YOUR SYSTEM SINCE IT WAS ADDED BEFORE SHIPMENT TO YOU. GO TO HOME CONTROL/DEVICE CONTROL AND SEE IF YOUR LAMP IS ACTIVE. IT SHOULD LOOK LIKE SLIDE #9 OR #10 ABOVE. IF IT DOES, THEN IT IS ACTIVE AND YOU SHOULD BE ABLE TO TURN IT OFF/ON AND CHANGE THE BRIGHTNESS.

IF YOU SEE YOUR Z-WAVE LIGHT WHEN YOU GO TO HOME CONTROL / DEVICE CONTROL, BUT YOU CANNOT TURN IT OFF / ON AND YOU HAVE NO CONTROL OVER THE BRIGHTNESS OF IT, THEN FOLLOW THE PROCEDURE ON THE NEXT PAGE.

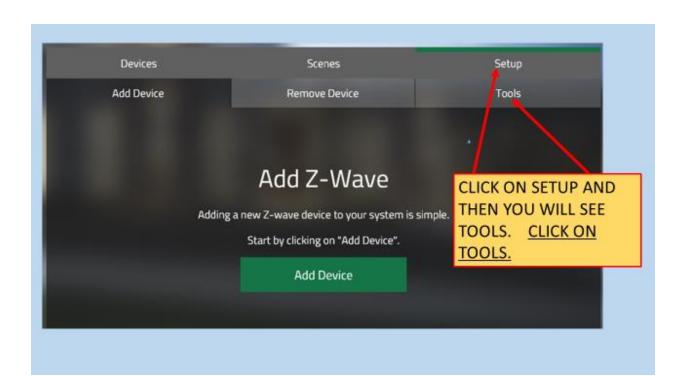

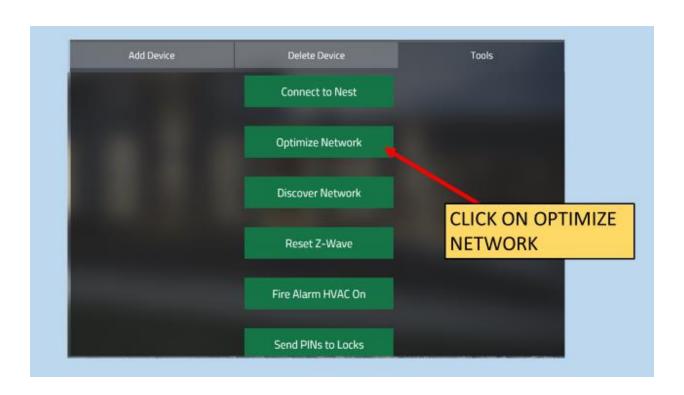

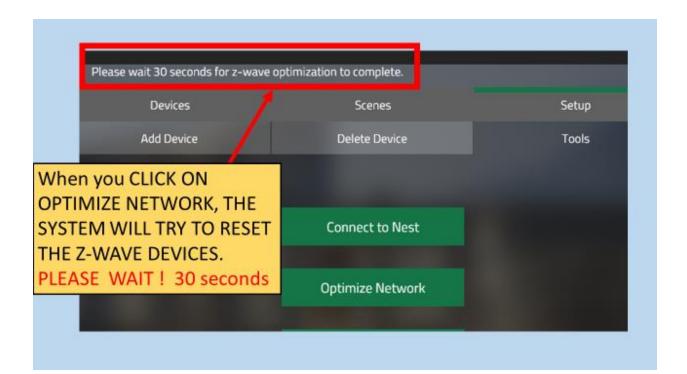

GO BACK TO HOME CONTROL / DEVICE CONTROL AND TRY
TO OPERATE YOUR LIGHT AGAIN. IF IT STILL DOES NOT
OPERATE PROPERLY, YOU WILL HAVE TO **REMOVE IT** FROM
YOUR SYSTEM AND **ADD** IT BACK. THIS IS EXPLAINED STEP
BY STEP IN THE NEXT TRAINING POWER-POINT,
"INSTALL Z-WAVE DEVICES".

IF YOUR Z-WAVE LIGHT WORKS PROPERLY, THEN CONTINUE ACTIVATING YOUR REMAINING Z-WAVE DEVICES . IF YOU RUN INTO DIFFICULTY YOU CAN THEN GO TO THE NEXT POWER-POINT.

ALSO IF YOU <u>DID NOT SEE YOUR Z-WAVE LIGHT LISTED</u> WHEN YOU WENT TO HOME CONTROL / DEVICE CONTROL ABOVE, IT MEANS IT IS NOT PART OF YOUR SYSTEM AND MUST BE ADD . YOU WILL HAVE TO ADD THE DEVICE INTO YOUR SYSTEM AS EXPLAINED ON THE NEXT TRAINING POWER-POINT.

THERE ARE THREE POSSIBILITIES AS YOU START TO ACTIVATE YOUR Z-WAVE LIGHT.

- 1. YOU SEE YOUR Z-WAVE LIGHT ON YOUR SYSTEM AND CAN OPERATED IT NORMAL.
- 2. YOU SEE YOUR LIGHT, BUT CANNOT OPERATE IT. YOU WILL HAVE TO REMOVE IT AND ADD IT BACK INTO YOUR SYSTEM.
- 3. YOUR Z-WAVE LIGHT DOES NOT SHOW UP IN YOUR SYSTEM. IN THIS CASE YOU JUST HAVE TO ADD IT.

THIS IS A TRANSITIONAL SLIDE, WE NOW DIRECT YOU TO THE TRAINING POWER-POINT, "INSTALL Z-WAVE DEVICES".